

STEP BY STEP INSTRUCTIONS

STEP 1

1. Insert PV module leads into the clip.

STEP 2


IF NO FLANGE INSTALLATION:

- 2A. Locate the serrated gripping faces.



IF FLANGED PANEL INSTALLATION:

- 2B. Locate the flange slot.

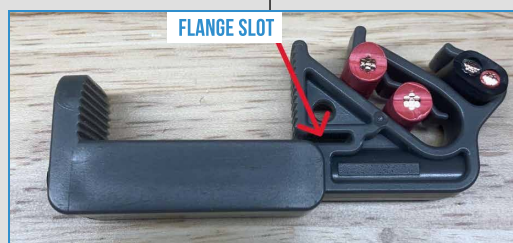


STEP 3

- 3A. Hold the clip flush against the module frame



- 3B. Slide Clip onto the module frame using the flange slot

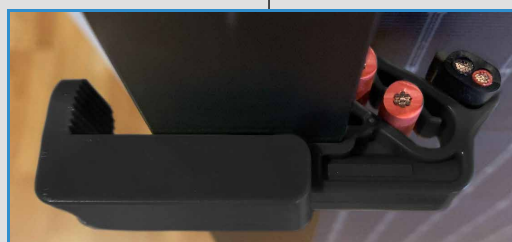

STEP 4

4. Tighten the screw, until the clip is snug and cannot slide on the frame.

DO NOT OVERTIGHTEN.

15 in-lbs maximum.

