

STEP BY STEP INSTRUCTIONS

STEP 1

1. Insert PV module leads into the clip.

STEP 2

2. Locate the Flange Slot, and flange slot ramp on OneClip




STEP 3

3. Start the clip on the module frame, utilizing the flange slot ramp.



STEP 4

4. Place your finger on the bottom of the tension arm and apply pressure towards the outside of the frame for smooth attachment.

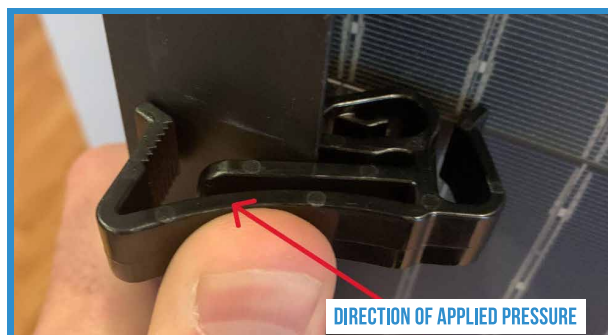

STEP 5

5. Ensure the Tension arm is fully engaged to the outside of the module frame. Push on arm to verify.



REMOVAL

STEP 1

1. Release the tension arm by applying pressure to the top angled feature. Arm should disengage completely from the outside of the frame.



STEP 2

2. Push clip off the frame by applying pressure to the tension arm, pushing towards the middle of the module.

